


URBAN SEARCH AND RESCUE PACK (USAR)

AMTC-K1074-BL
User's Quick Guide



INTRODUCTION

The Urban Search and Rescue pack (USAR) is an innovative pack system designed to be used in a wide variety of disaster and rescue scenarios faced by first responders, FEMA Task force personnel, and law enforcement. The system is manufactured from fire resistant materials with waterproof lining in all pockets. The system consists of four major assemblies:

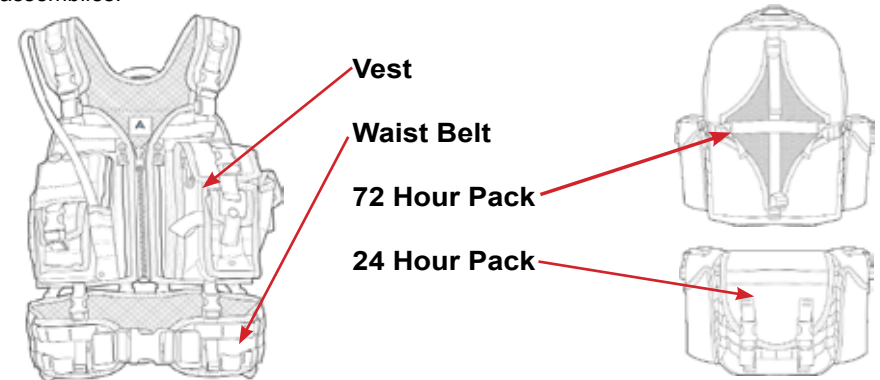


The USAR can be modified to meet your mission. It can be worn as vest only, belt only with 24 hour pack, vest assembly and belt, full assembly with all components. You decide.

INSPECTING YOUR USAR PACK SYSTEM:

It is the responsibility of the user to visually inspect the USAR prior to each use. If damage is found during an inspection, the pack should be removed from service until repaired. Inspect all attachment & load bearing points for:

- * Cuts, tears, burns, and abrasion damage
- * Open seams and loose or broken stitching
- * Contamination damage such as petroleum products and corrosives
- * Plastic hardware, zippers, and snaps for corrosion, cracks, and deformities

Assembly Continued

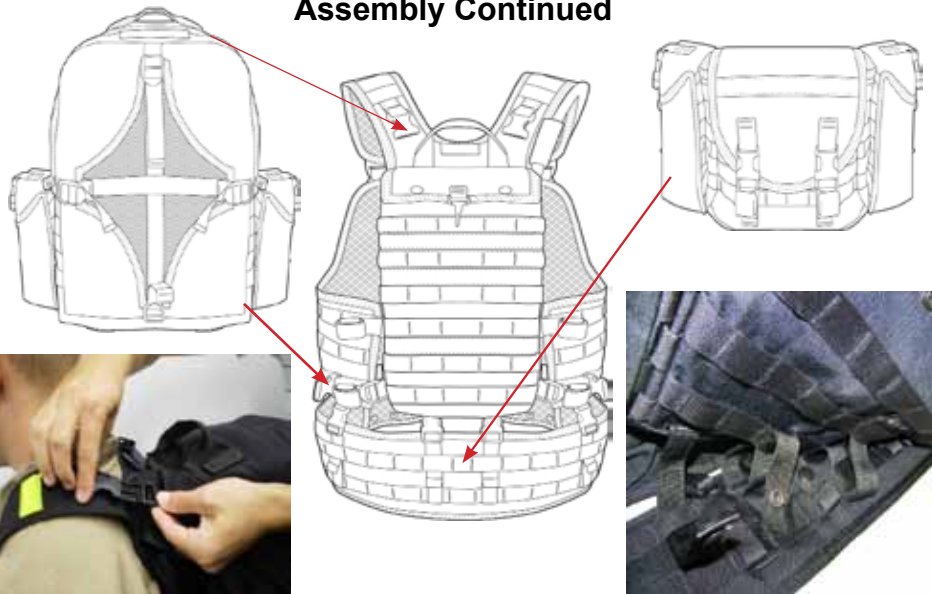

5) Attach 72 hour pack to vest assembly using the four buckles shown above on the upper and lower vest.

NOTE: 72 hour pack can also be configured as a stand alone pack using provided shoulder straps.

6) Attach 24 hour pack to waist belt in position shown by weaving MOLLE straps on back of pack through MOLLE loops on belt as shown above.



7) For Rain Fly access, unzip rain fly pocket on bottom of 72 hr pack and extend waterproof material to full length. Then pull over entire 72 hour pack and close with draw cord.



NOTE: Rain fly pocket can be removed or installed when needed using MOLLE weave system on bottom of 72 hour pack. Rain fly can only be used when 72 hour pack is used as a stand alone pack.

Aerial Machine and Tool Corp.
4298 JEB Stuart Hwy
Meadows of Dan, VA 24120



www.aerialmachineandtool.com
Phone: 276-952-2006
FAX: 276-952-2231

ASSEMBLING AND ADJUSTING YOUR USAR PACK SYSTEM:

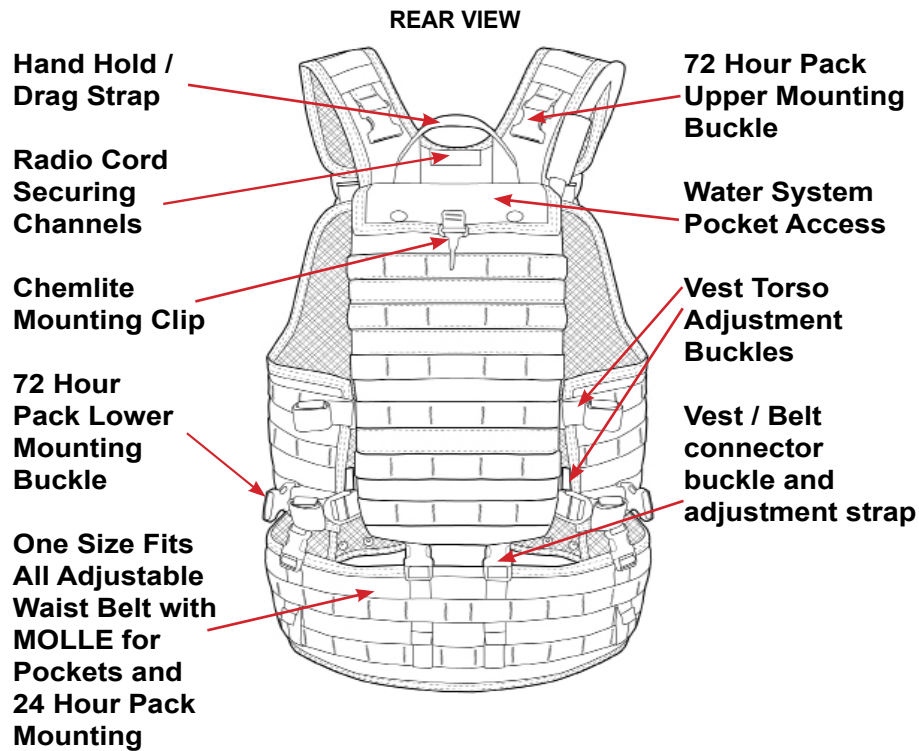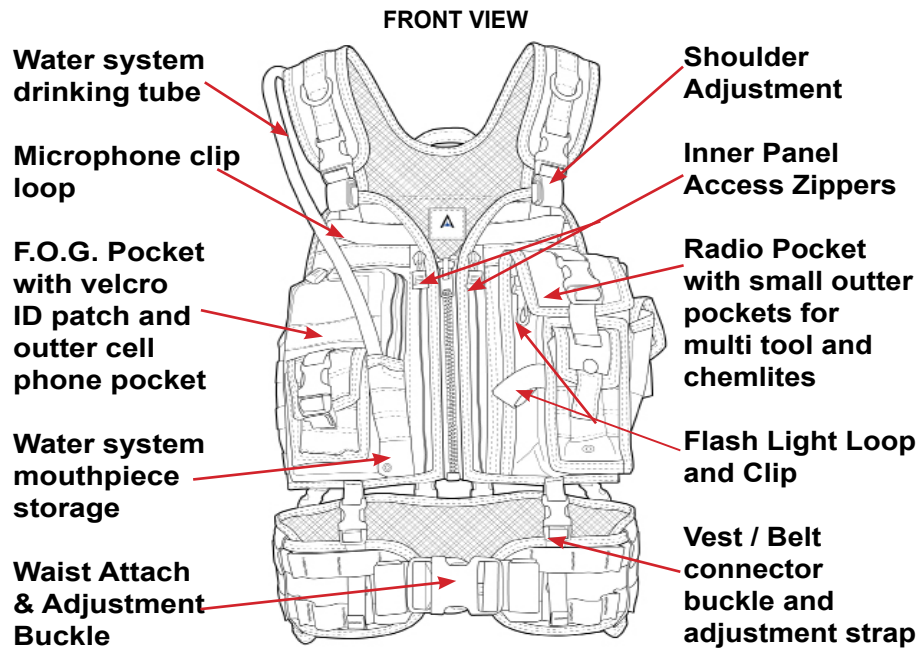

1) Adjust belt by unsnapping the four "pull-the-dot" snap group. Run three fingers between belt extension panel and main belt while pulling up on buckle and belt extension end.




2) Extend waist belt extension panel to desired length. Make sure the four snaps on extension panel facing inside main belt are aligned with four studs facing outward on main belt.

NOTE: Snaps only release in one direction; away from waist buckle. Excessive force may damage snaps.



3) Close the four snaps starting with two snaps furthest away from belt buckle. Place snap at an angle away from belt buckle on snap stud. Firmly press down on snap moving down and towards belt buckle until snap engages.

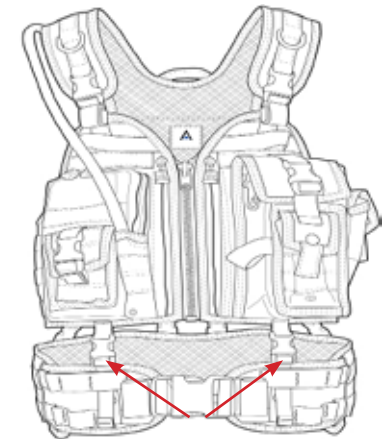

4) Adjust vest and belt separation using vest / belt connector buckles. There are two front, two side, and two back buckles.

NOTE: Snaps only engage in one direction; towards waist buckle. Excessive force may damage snaps.